COOKTOP PARTS

For Models: GR448LXPQ3, GR448LXPB3, GR448LXPT3, GR448LXPS3
(White) (Black) (Biscuit) (Stainless Steel)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN OVEN

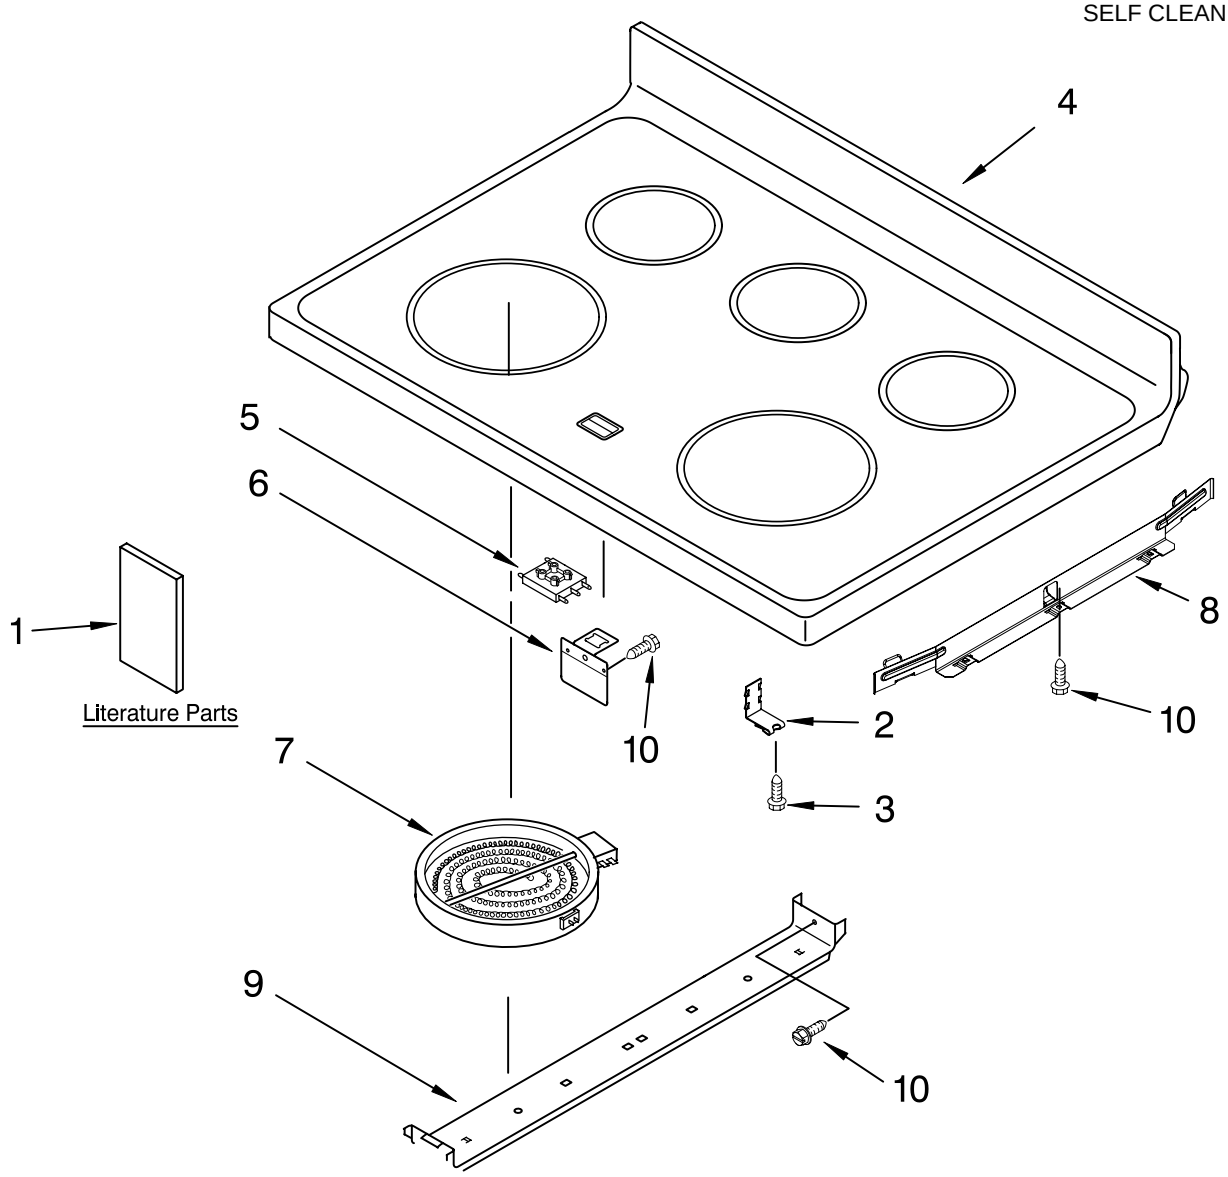

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	9759784	Tech Sheet
	9758377	Installation Instructions
		Template, Anti−Tip
	9757143	English/French
	9757142	English/Spanish
	9762761	Safer Cooking Tips
	W10017630	Owner's Manual
2	W10035930	Spring, Locator
3	3196170	Screw
4		Cooktop
	9758722	White
	9758723	Black
	9758724	Biscuit
5	8523739	Light, Indicator (Hot Surface)
6	8523741	Bracket, Ind Light
7		Element, Surface
	9759351	2400/1000 W − LF
	8523698	1200 W − LR
	8523698	1200 W − RR
	9759351	2400/1000 W − RF
	8523699	100 W − CR
8	8524132	Shield, Wiring
9		Bracket, Element
	8272791	(2)
	8273720	(1)
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: GR448LXPQ3, GR448LXPB3, GR448LXPT3, GR448LXPS3

(White) (Black) (Biscuit) (Stainless Steel)

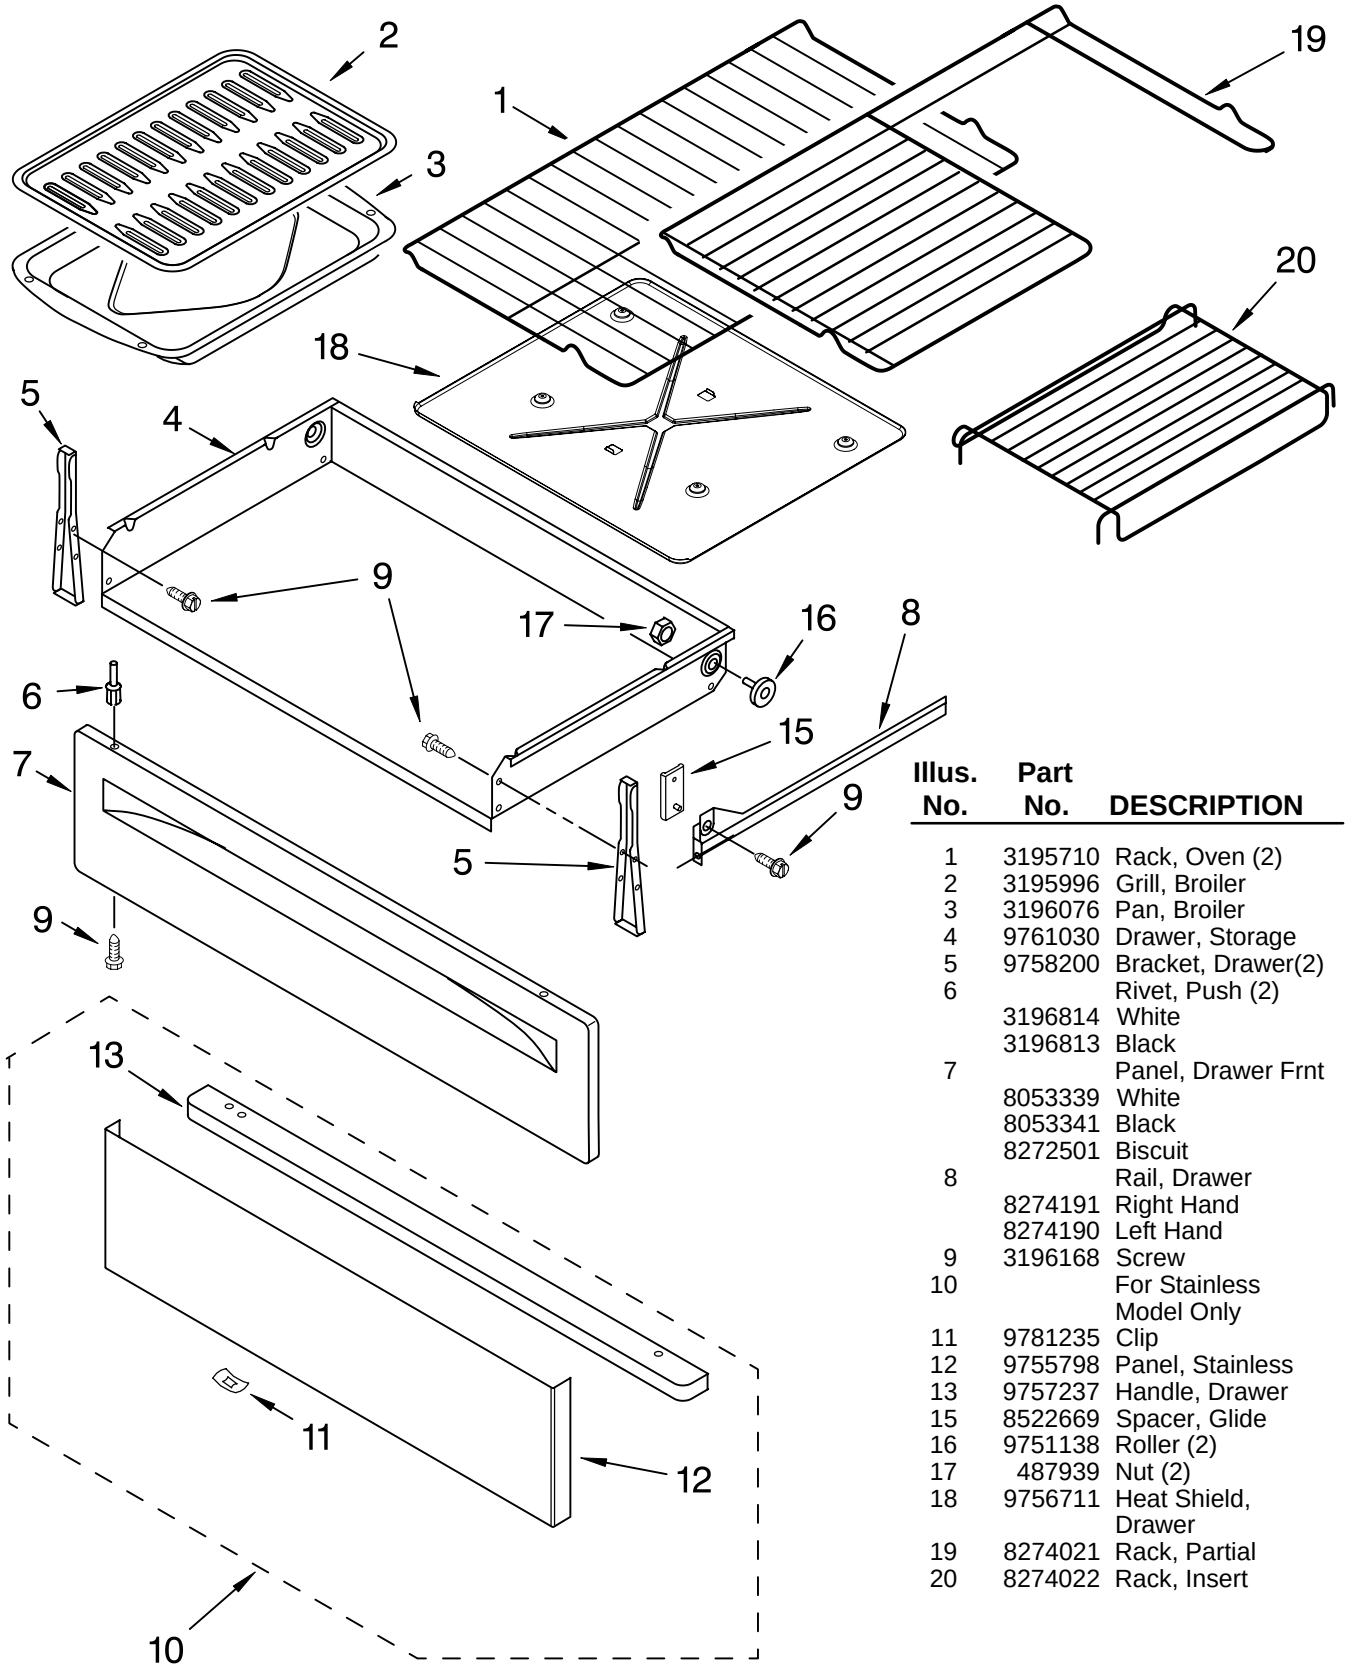

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	9761030	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196813	Black
7		Panel, Drawer Frnt
	8053339	White
	8053341	Black
	8272501	Biscuit
8		Rail, Drawer
	8274191	Right Hand
	8274190	Left Hand
9	3196168	Screw
10		For Stainless Model Only
11	9781235	Clip
12	9755798	Panel, Stainless
13	9757237	Handle, Drawer
15	8522669	Spacer, Glide
16	9751138	Roller (2)
17	487939	Nut (2)
18	9756711	Heat Shield, Drawer
19	8274021	Rack, Partial
20	8274022	Rack, Insert

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: GR448LXPQ3, GR448LXPB3, GR448LXPT3, GR448LXPS3
(White) (Black) (Biscuit) (Stainless Steel)

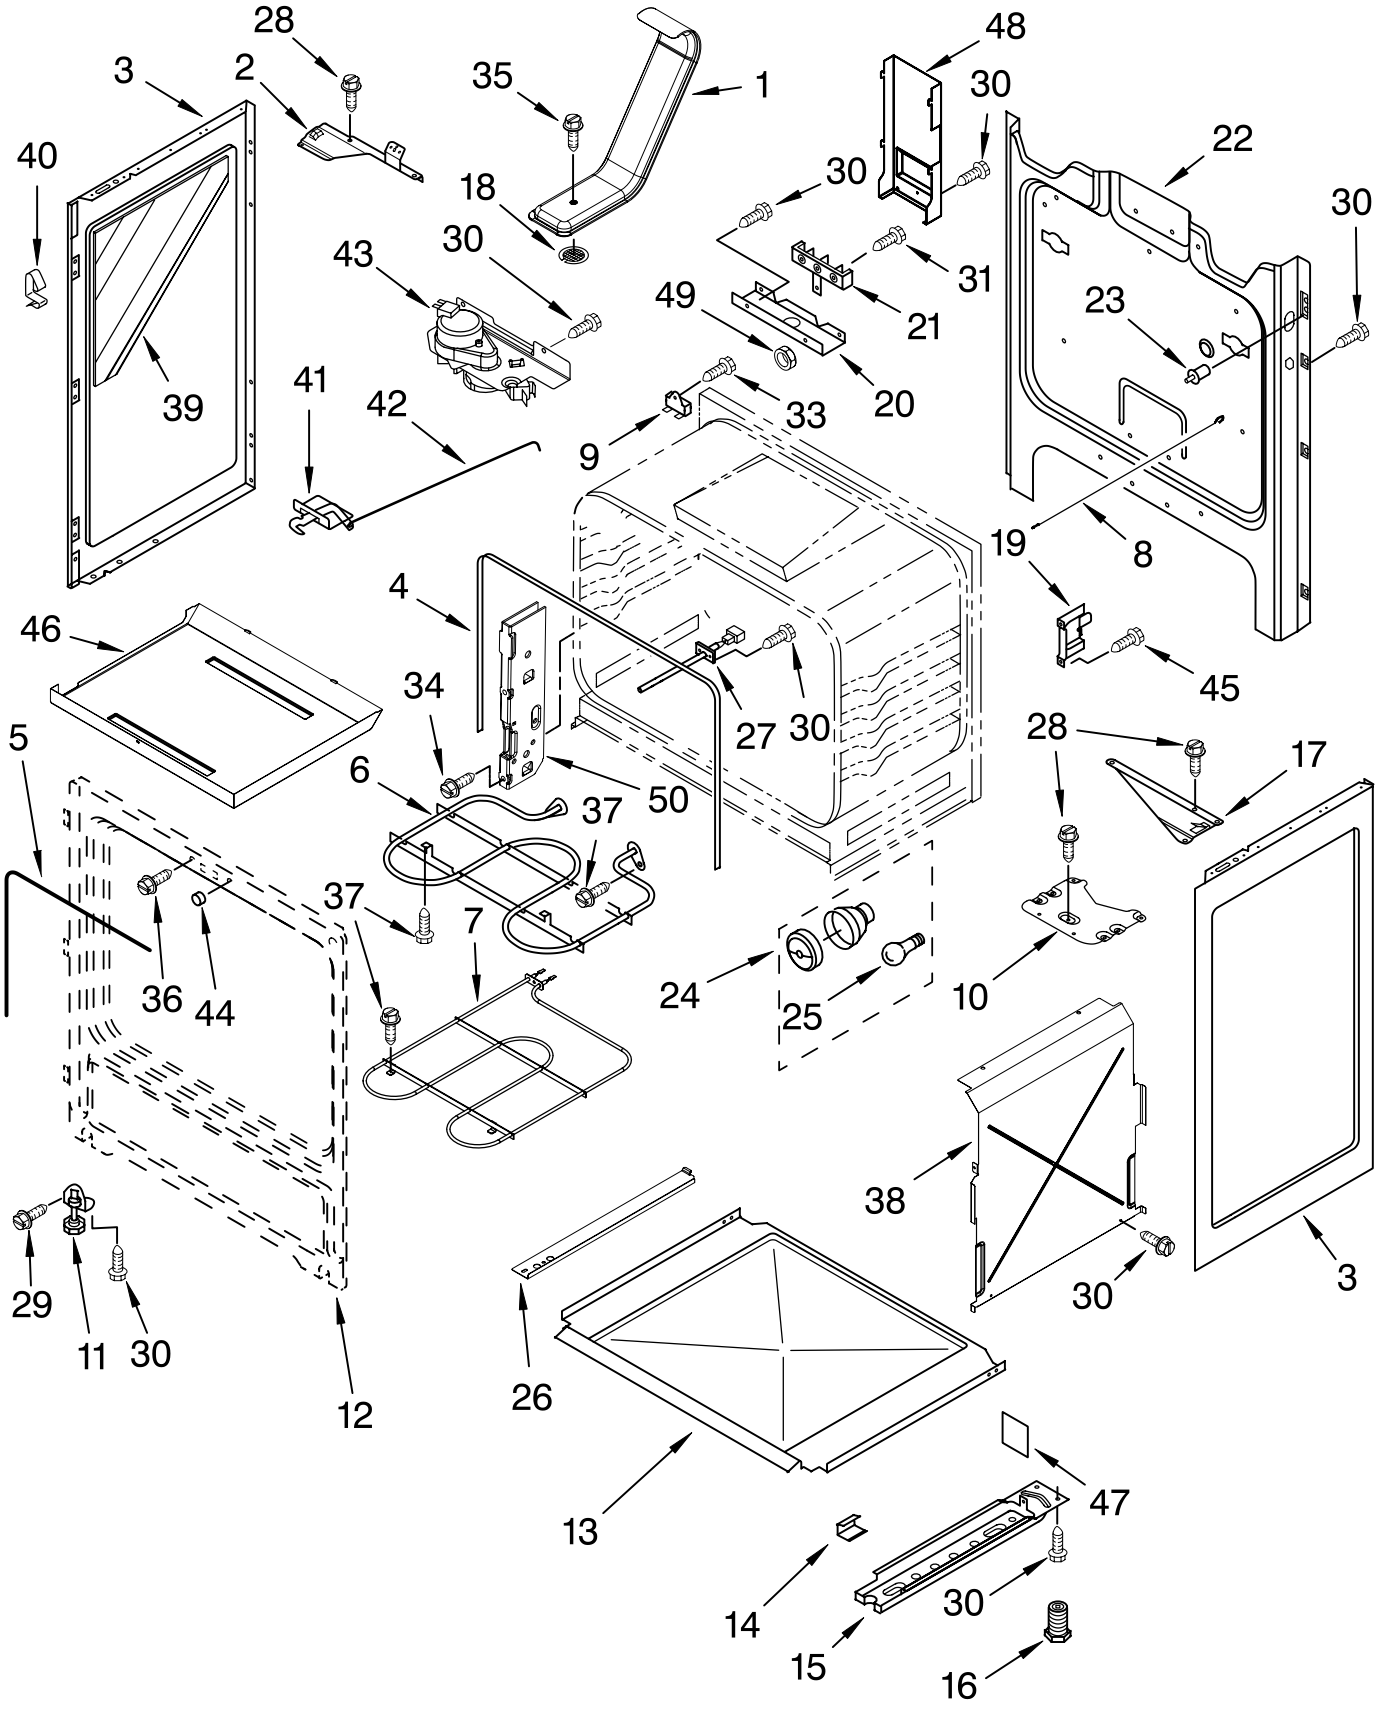

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: GR448LXPQ3, GR448LXPB3, GR448LXPT3, GR448LXPS3
(White) (Black) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1	9761300	Vent Tube Assbly
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White−Textured
	8053832	Black−Textured
	8272519	Biscuit−Textured
4	W10010350	Seal, Oven Flange
5	8522416	Seal, Oven Door
6	9757341	Element, Broil
7	9755770	Element, Bake (Hidden Bake)
8	9757239	Rod − Door Switch
9	3196548	Fuse, Thermal
10	3195736	Support, Front (2)
11	3196037	Foot, Front (2)
12		Frame, Front (Not Serviced)
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	9761935	Foot, Rear (2)
17	3195987	Support, Corner RR
18	9761301	Screen − Catalyst
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	9755771	Cover, Tray
27	8273902	Sensor, Oven
28	3196165	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
33	3196172	Screw
34	W10031780	Screw
35	3196566	Screw
36	3196560	Screw
37	3196174	Screw
38	9758238	Retainer, Side (2)
39	9761490	Insulation
40	3195813	Clip − Mounting
41	9761013	Latch, Door
42	3196961	Rod, Latch
43	9757241	Latch Asy, Rear
44	9758701	Spacer, Door
45	3196169	Screw
46	9755769	Tray, Hidden Bake Element
47	9759689	Card, Insulator
48	9758283	Cover, Box
49	112432	Nut (3)
50	9760407	Brkt − Hinge

INSULATION

	8272616	Insulation, Wrap
	9755772	Insulation, Back
	8272613	Insulation, Vent

CONTROL PANEL PARTS

For Models: GR448LXPQ3, GR448LXPB3, GR448LXPT3, GR448LXPS3

(White) (Black) (Biscuit) (Stainless Steel)

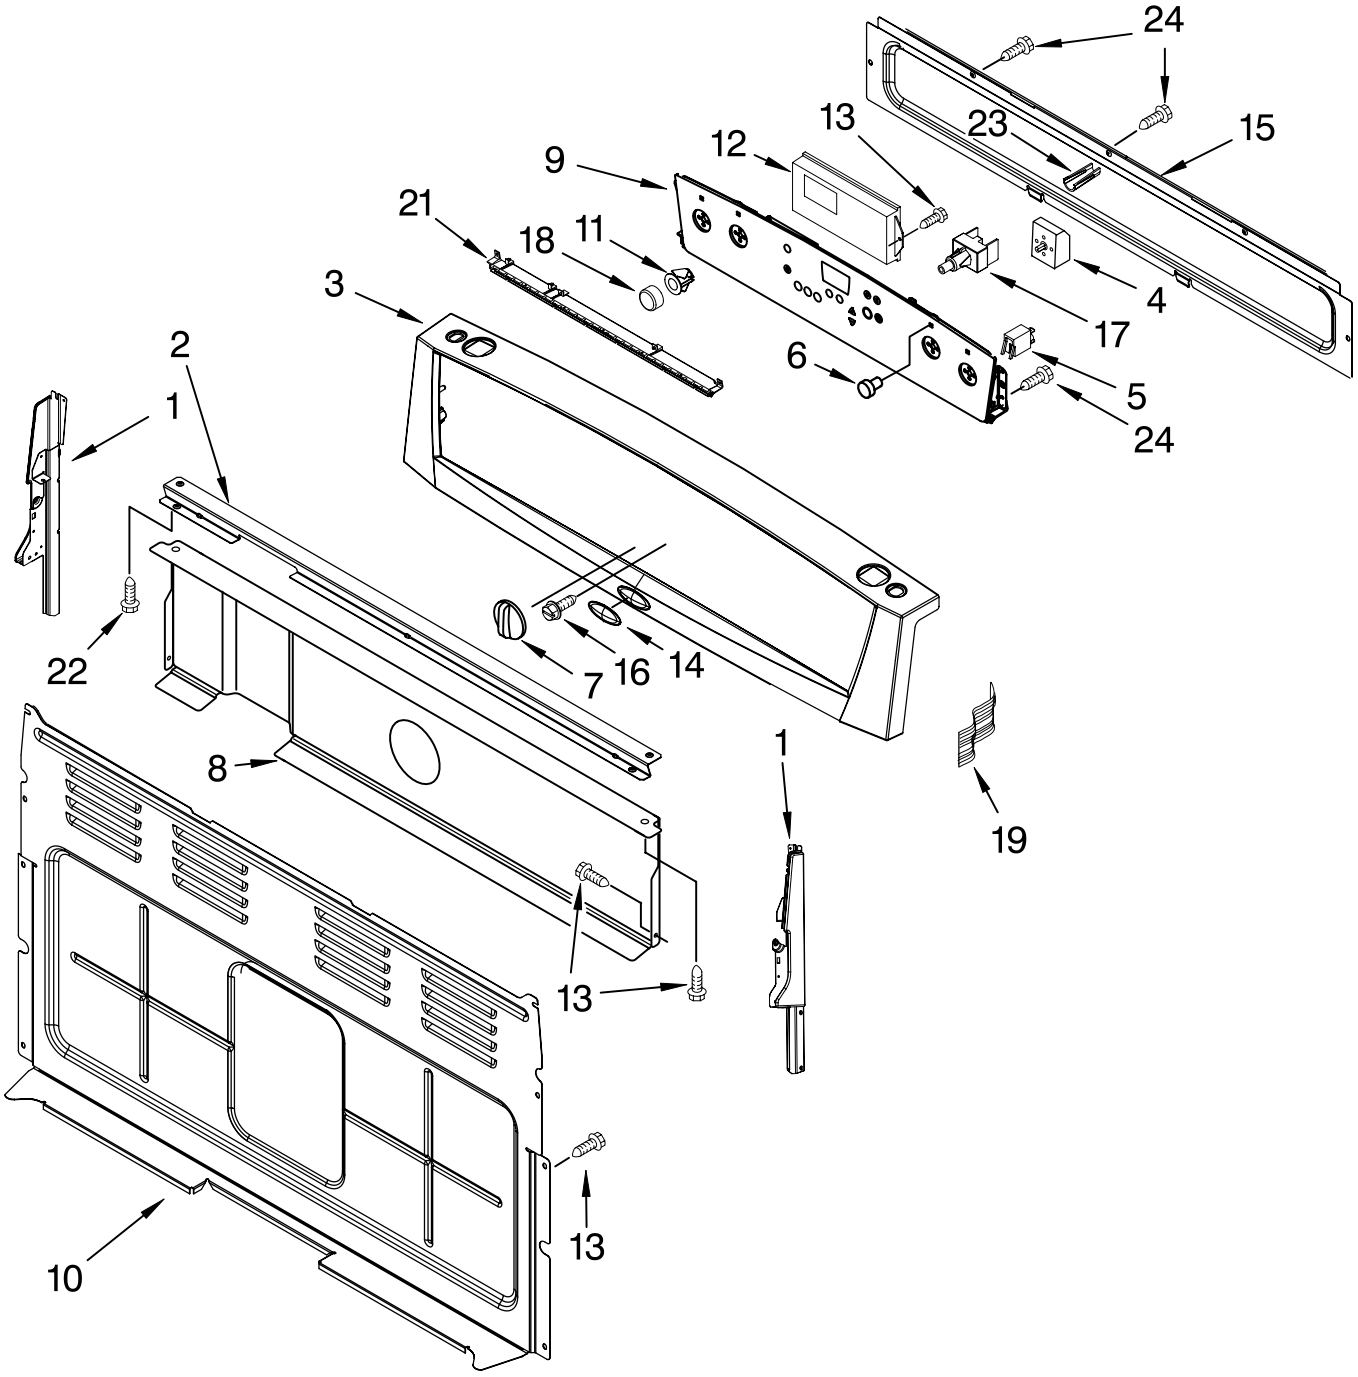

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GR448LXPQ3, GR448LXPB3, GR448LXPT3, GR448LXPS3
(White) (Black) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009080	Black Left Hand
	W10009090	Black Right Hand
	W10009060	Biscuit Left Hand
	W10009070	Biscuit Right Hand
2	9756364	Bracket, Console
3		Panel, Backguard
	9759030	White
	9759031	Black
	9759032	Biscuit
	9759033	Stainless Steel
4		Switch, Infinite
	9758060	Left Front
	3148951	Left Rear
	3148951	Right Rear
	9758060	Right Front
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob, Infinite (4)
	9757132	White
	9758129	Black
	9757626	Biscuit
8	8523280	Shield, Heat
9		Glss Swtch Membrne
	9757623	White
	9758473	Black
	9758472	Biscuit
10	9756999	Cover, Rear
11		Bezel, Keep Warm
	9757489	White
	9758489	Black
	9758488	Biscuit
12	9757271	Control, Range
13	3196178	Screw
14	9757613	Nameplate
15	9756366	Cover, Rear (Console)
16	3400882	Screw
17	8272820	Switch
18		Button
	9757492	White
	9758491	Black
	9758490	Biscuit
19	9762425	Cnntr,Cable Flex
21	9757358	Reflector, Light
22		Screw
	3196166	White
	3196168	Black
	8281194	Biscuit
23	9757490	Support, Glass
24	3196178	Screw

DOOR PARTS

For Models: GR448LXPQ3, GR448LXPB3, GR448LXPT3, GR448LXPS3
(White) (Black) (Biscuit) (Stainless Steel)

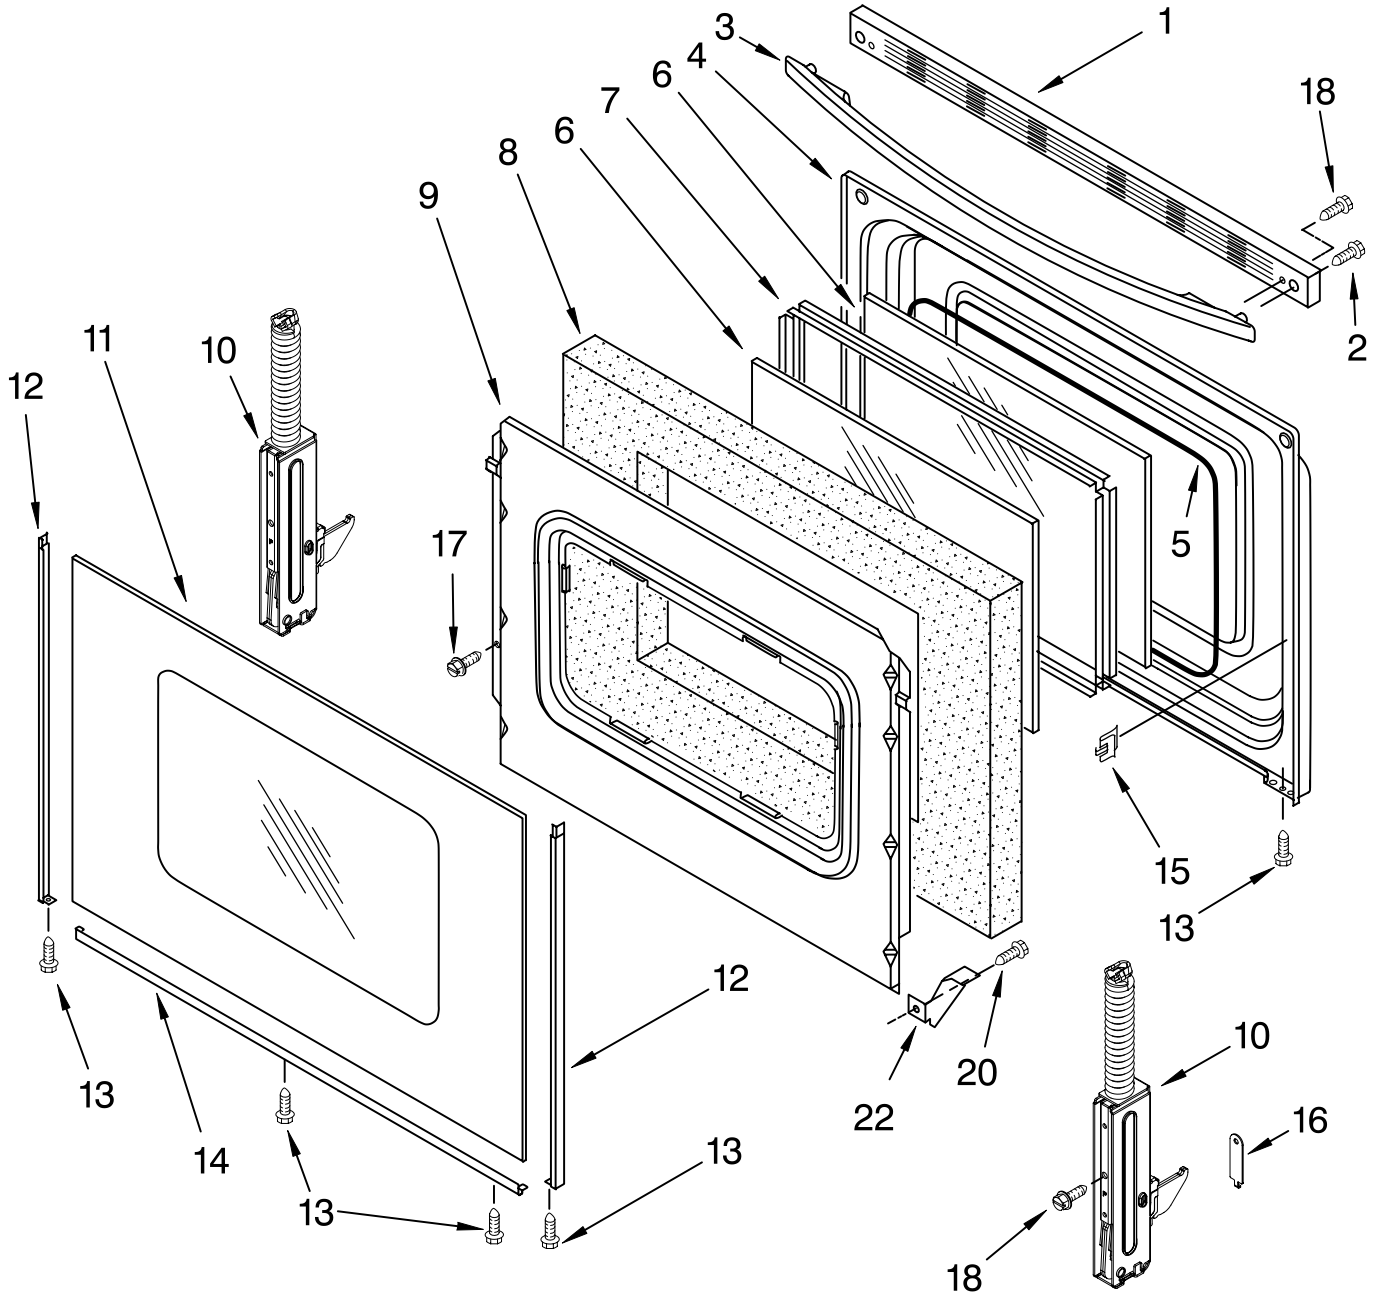

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: GR448LXPQ3, GR448LXPB3, GR448LXPT3, GR448LXPS3

(White) (Black) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Top
	W10016370	White
	W10016380	Black
	W10016450	Biscuit
	W10016420	Stainless Steel
2	3196164	Screw
3		Handle, Door
	8522444	White
	3195922	Black
	8522445	Biscuit
4	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.
10	9761493	Hinge, Door (2)
11		Glass, Outer
	9756415	White
	9756414	Black
	9756416	Biscuit
	9756435	Stainless Model
12		Trim, Side
	8523166	White Left Hand
	8523172	White Right Hand
	8523171	Black Left Hand
	8523165	Black Right Hand
	8523167	Biscuit Left Hand
	8523173	Biscuit Right Hand
13	3196160	Screw
14		Trim, Lower
	8523175	White
	8523177	Black
	8523178	Biscuit
	8523180	Stainless Model
15	3196025	Clip, Glass (4)
16	9761517	Clip, Door Mntg
17	W10031790	Screw
18	W10031780	Screw
20	3196165	Screw
22	3196794	Bracket, Window(2)

OPTIONAL PARTS

For Models: GR448LXPQ3, GR448LXPB3, GR448LXPT3, GR448LXPS3
(White) (Black) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150° c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242827	Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

ANTI−TIP KIT

W10017440	Anti−Tip Kit

WIRING HARNESS PARTS

9761453	Harness, Wire (Cooktop Left)
9761455	Harness, Wire (Cooktop Right)
9759002	Harness, Wire (Main)
9758174	Harness,Wire (Sensor/Dr Switch)
9757339	Harness, Bake Element (Hidden)
3196520	Clip, Harness
8523279	Wire, Ground
3196173	Screw, Ground
3196154	Screw
313660	Clip, Ground Wire